


I recommend waiting to drill the holes until you have the acrylic panels cut and (carefully) using the acrylic panels as a pilot hole guide.

Fancy Supporting the Project?

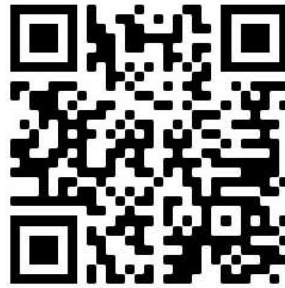

patreon.com/Captain_Bob



paypal.me/CaptainBobSimulation

