

I recommend waiting to drill the holes until you have the acrylic panels cut and (carefully) using the acrylic panels as a pilot hole guide.


Fancy Supporting the Project?




patreon.com/Captain_Bob




paypal.me/CaptainBobSimulation

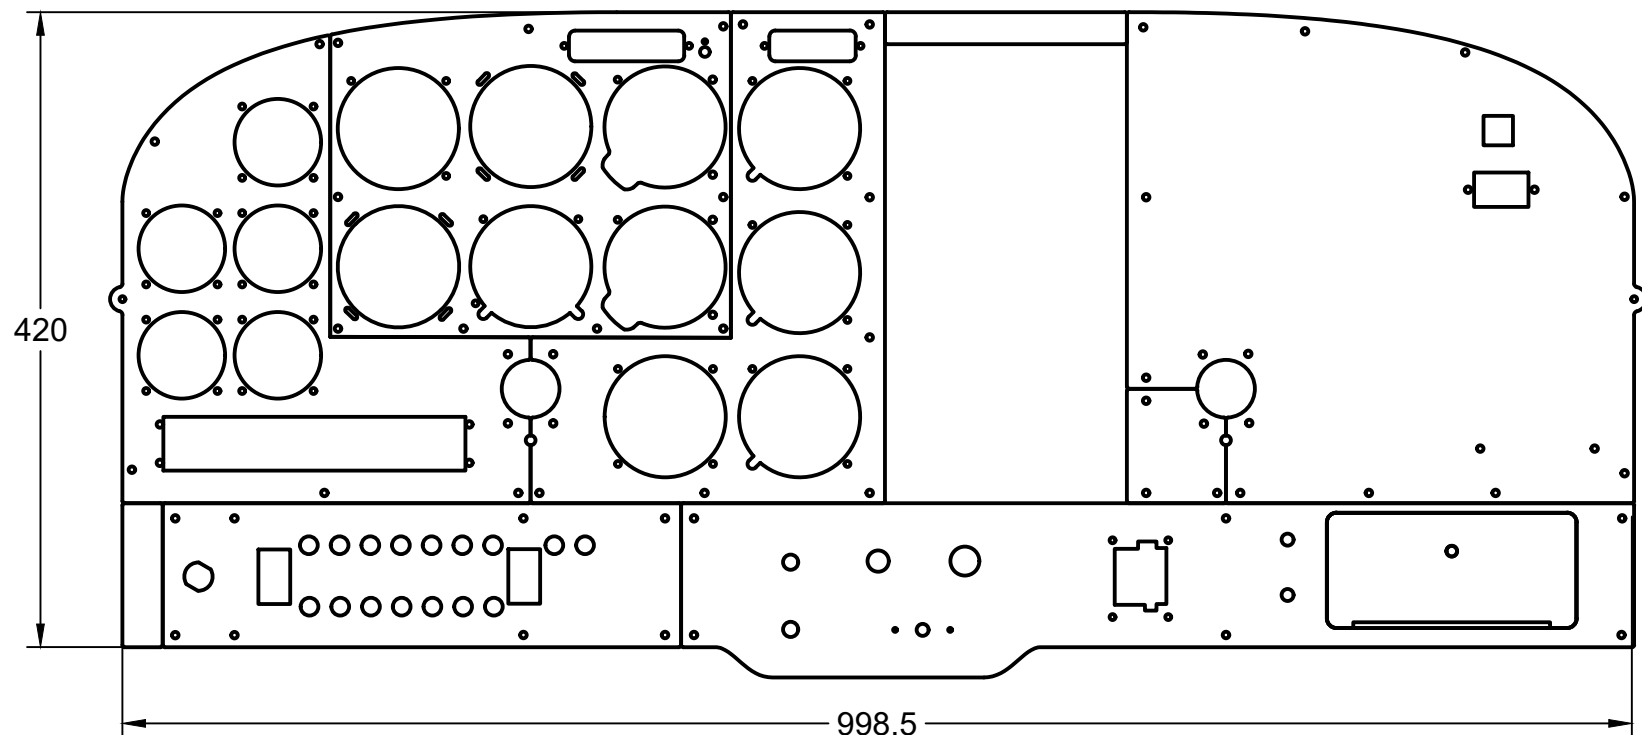

		PROJECT		
		Cessna 172 Project V3		
		TITLE		
		2A-1 Panel		
APPROVED	SIZE	CODE	DWG NO	REV
CHECKED	A			
DRAWN	Trevor Olsen	06-Oct-21	SCALE 1:16	WEIGHT
			SHEET 3/6	

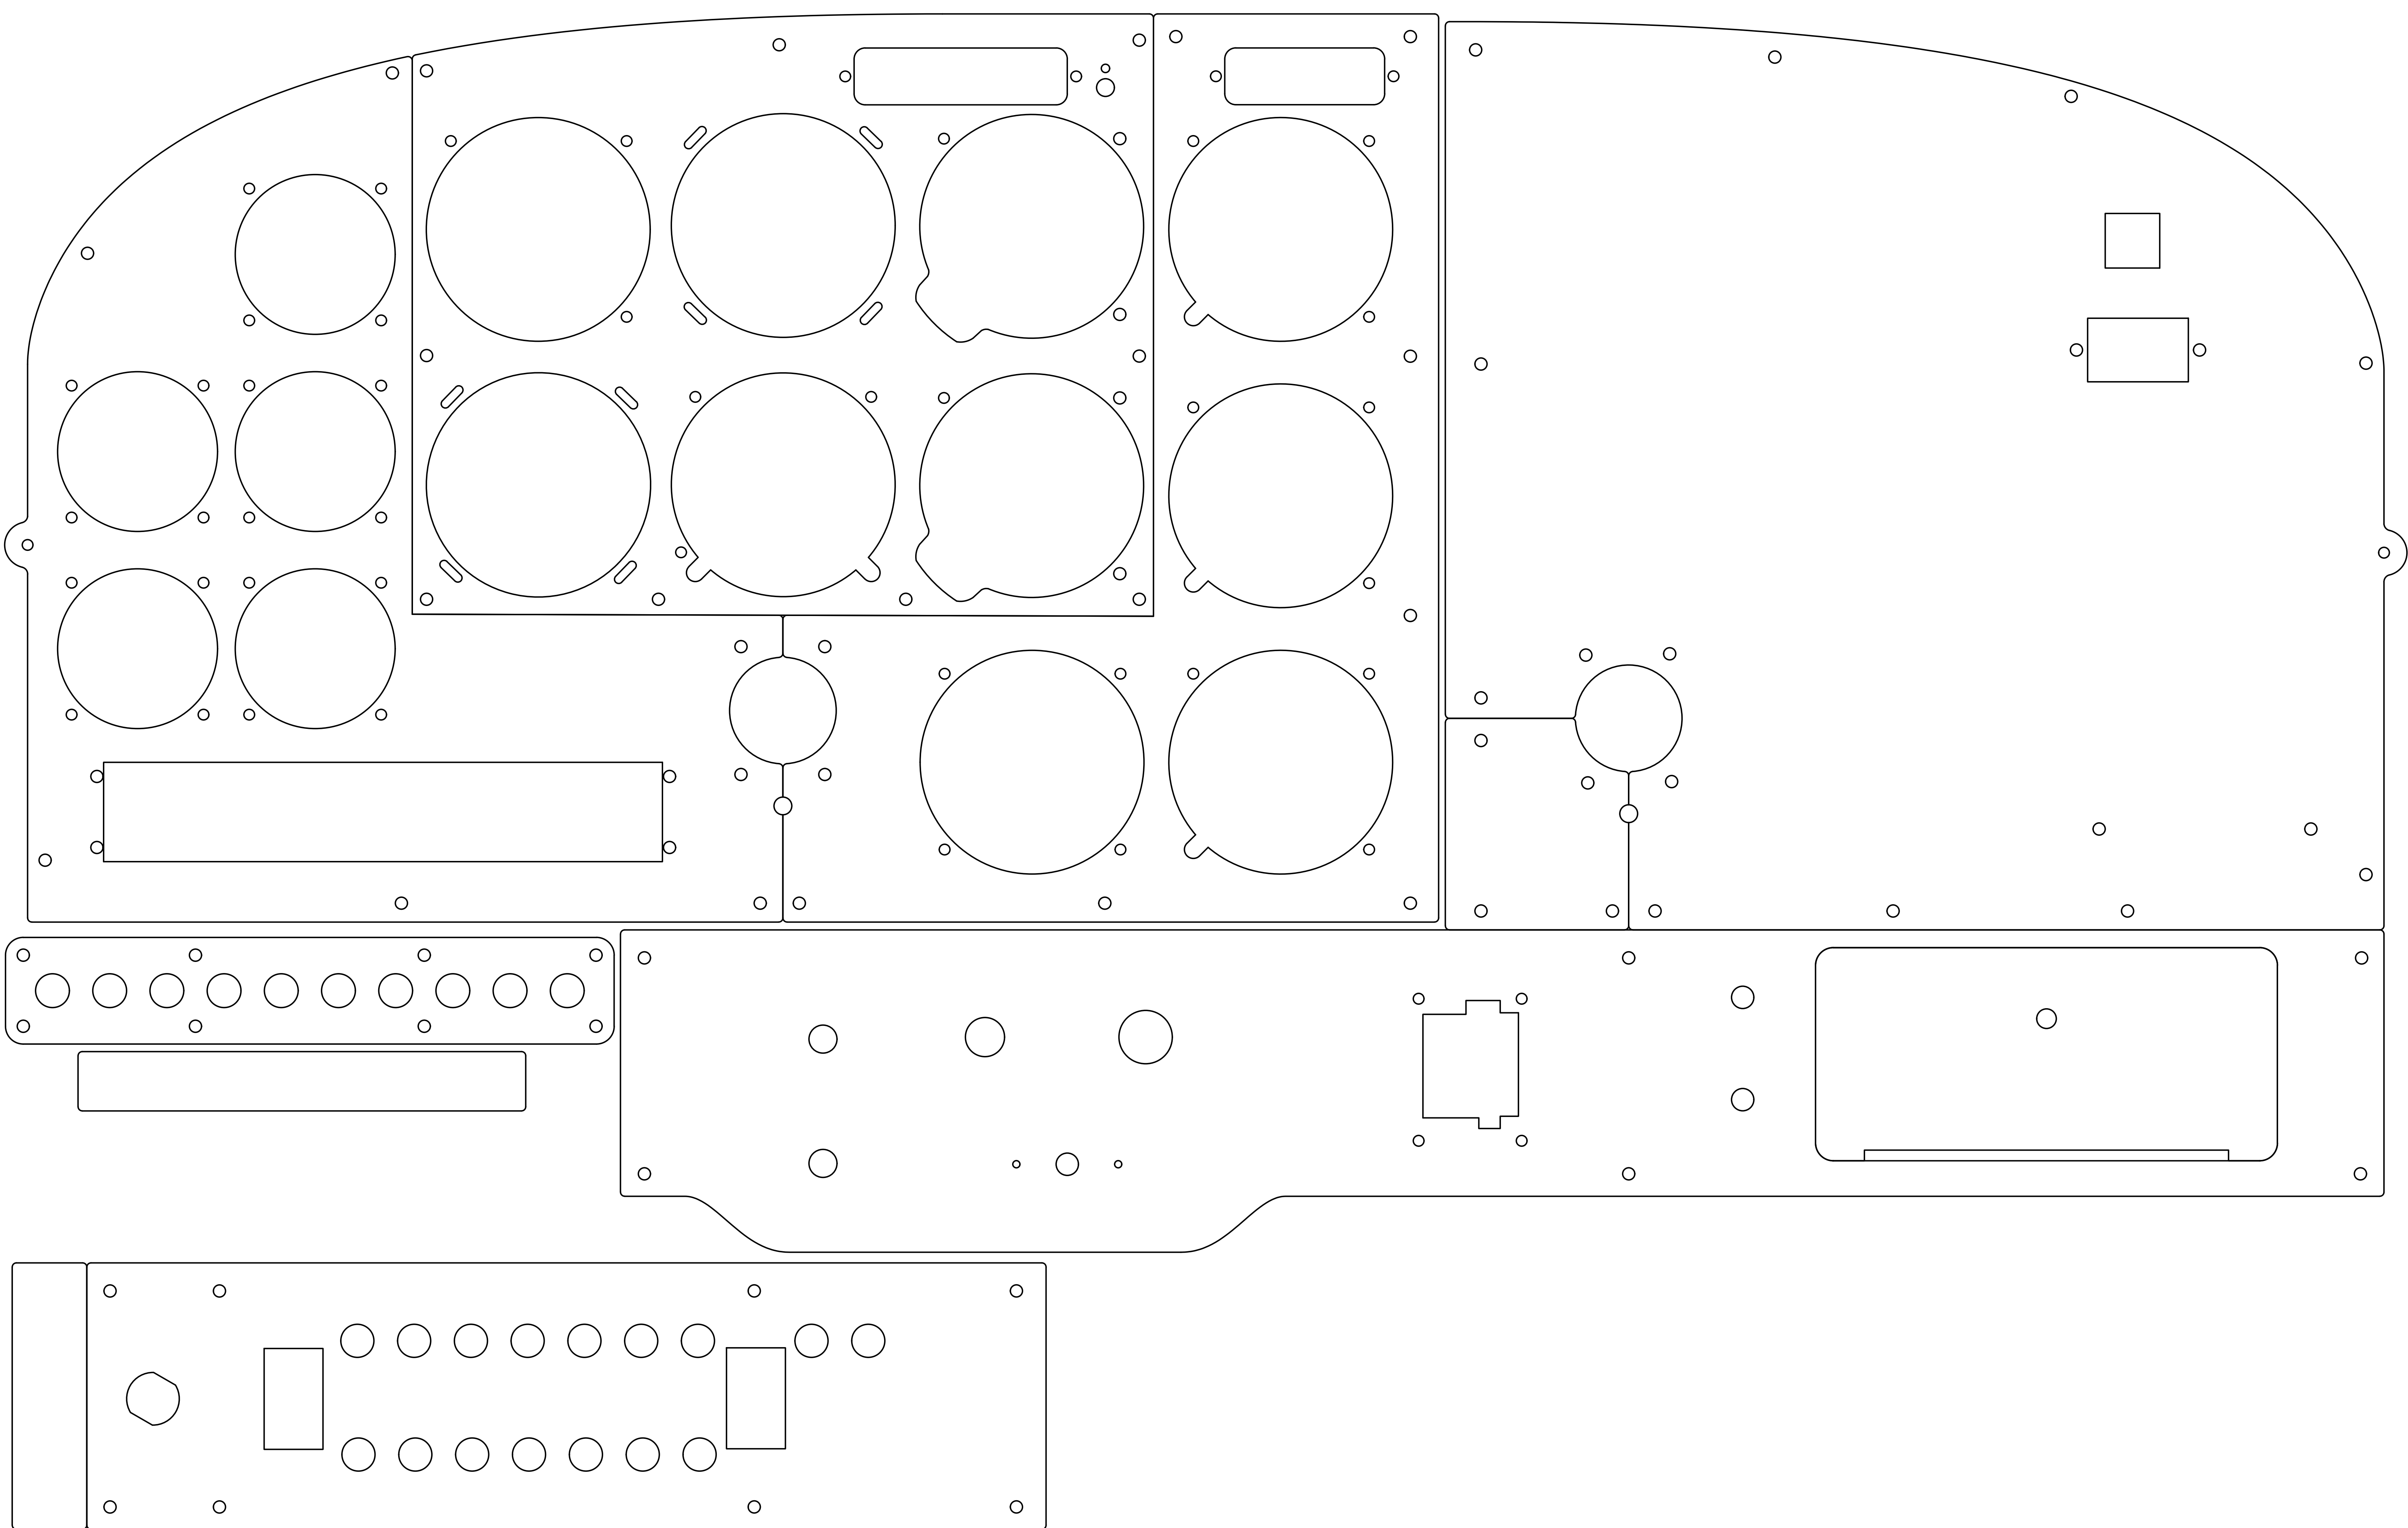

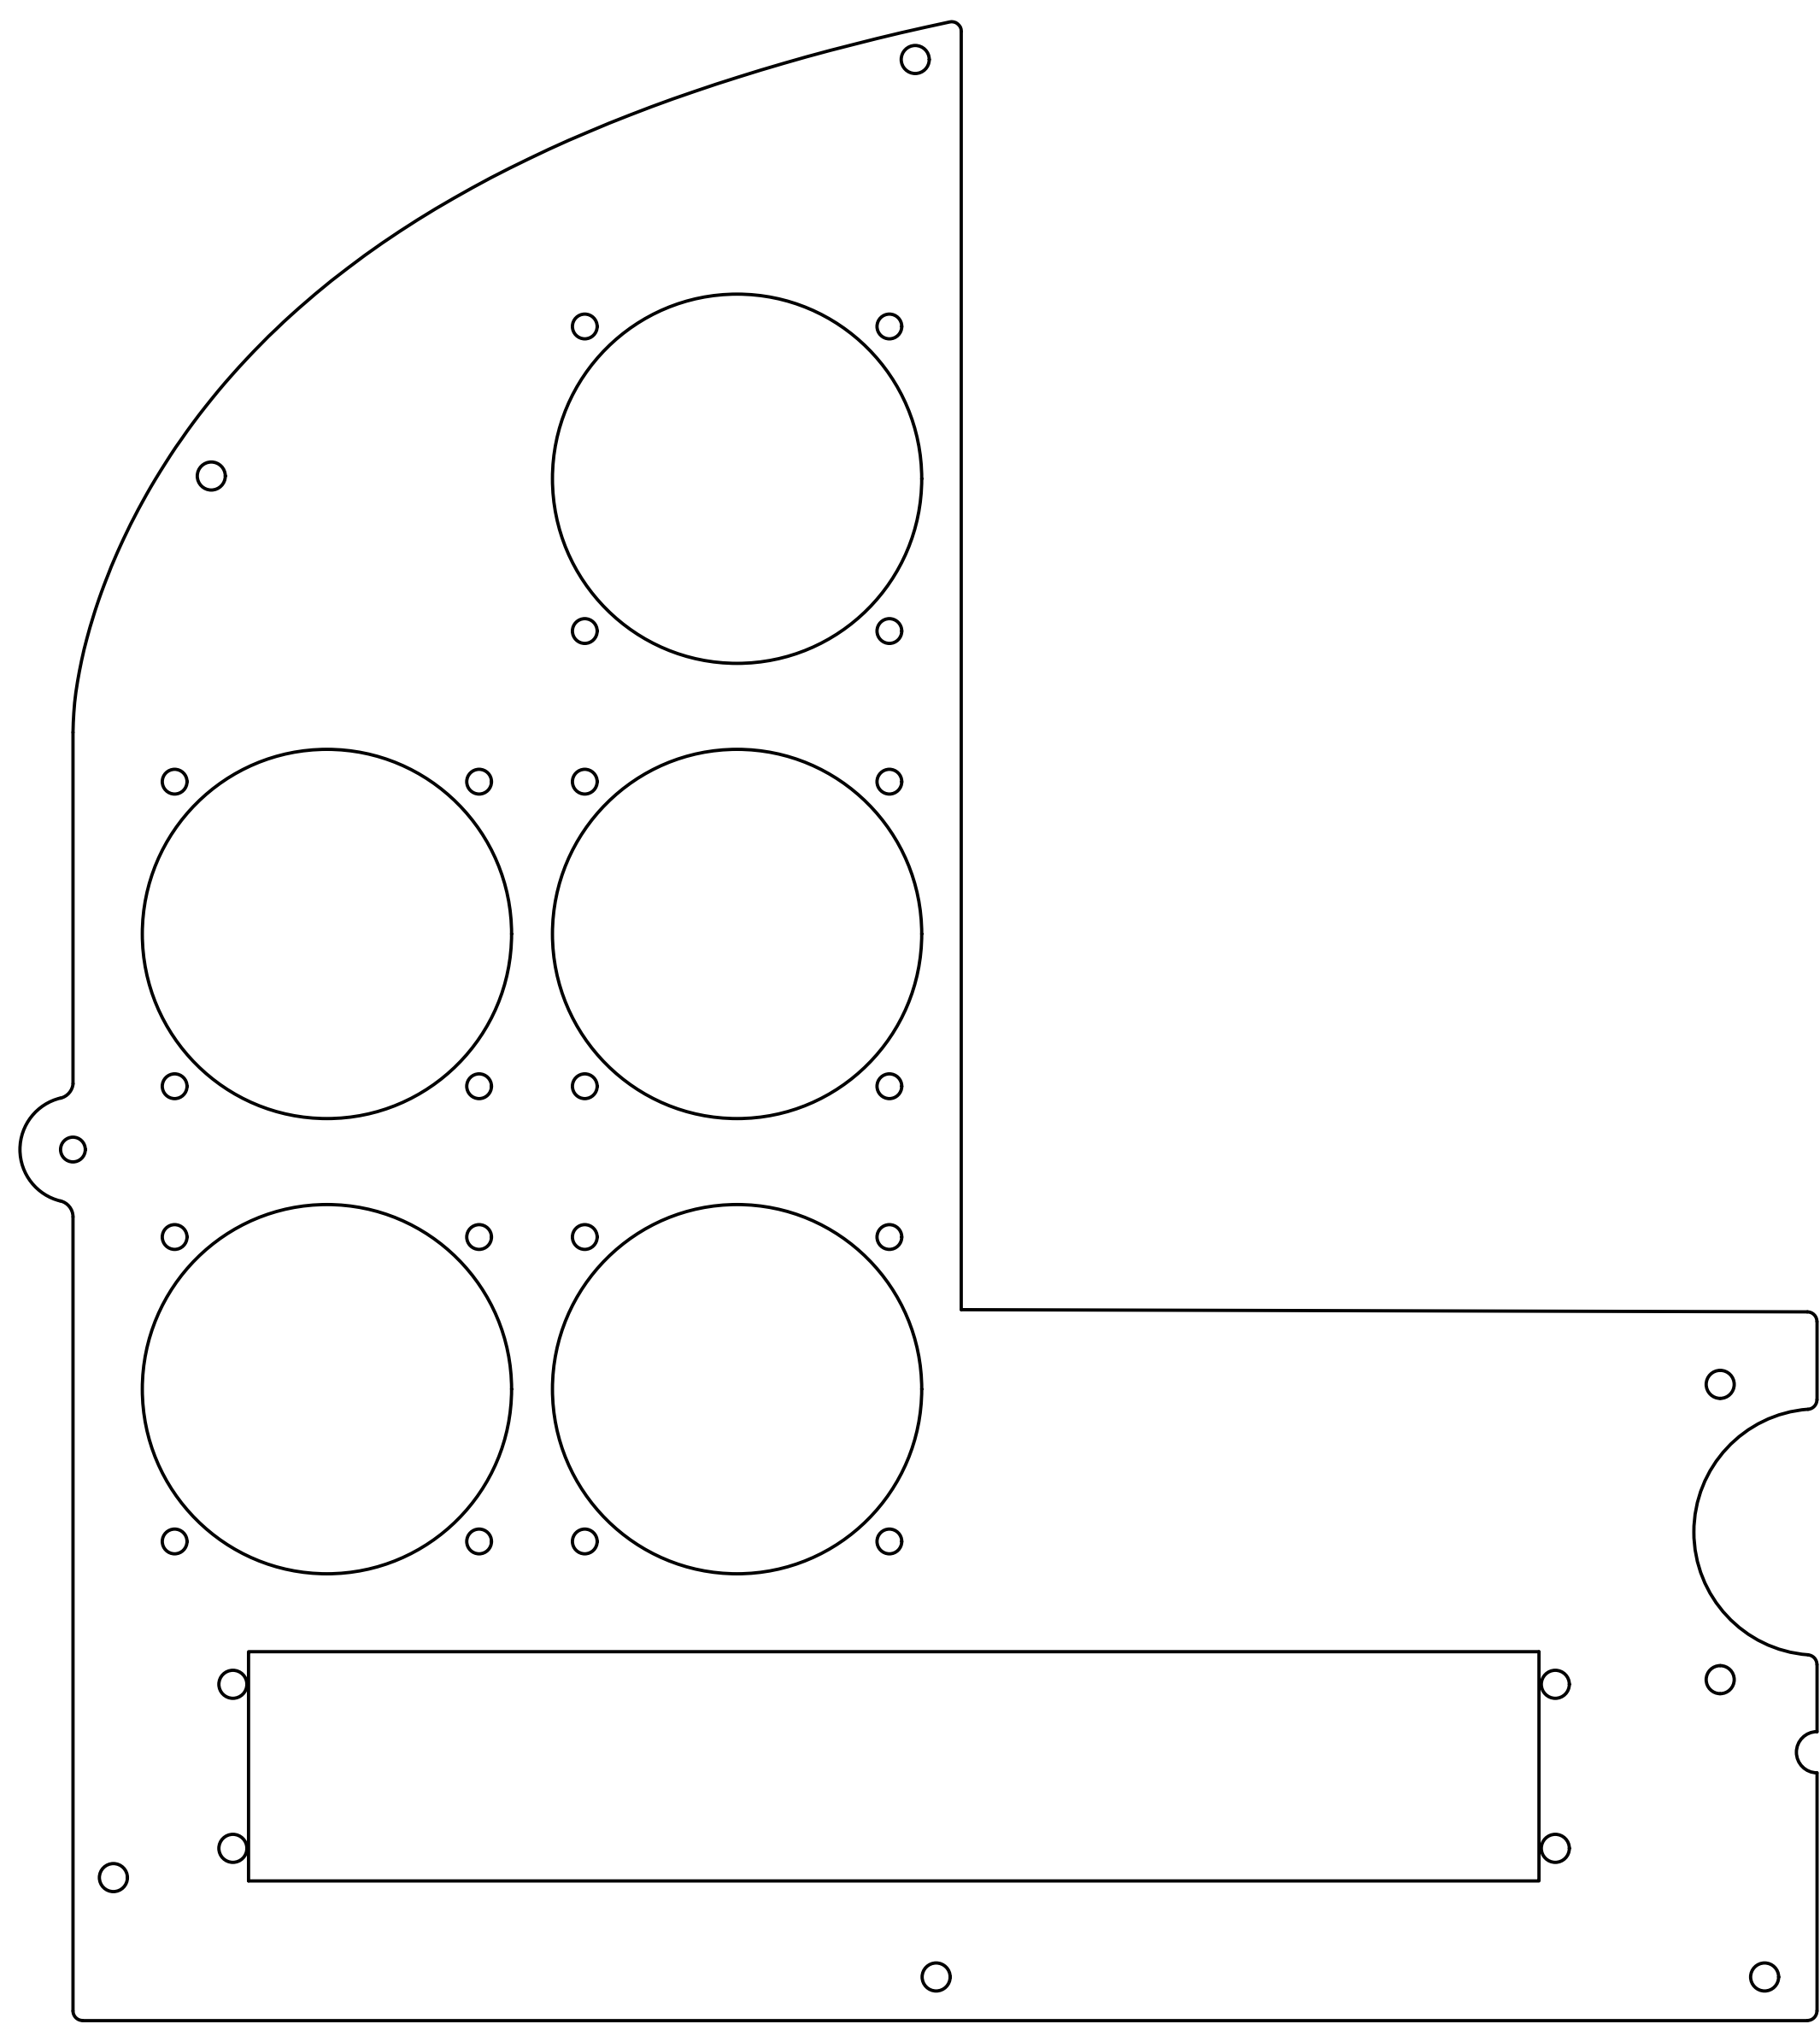

Redo

